

### V2 Technical Troubleshooting: Remove the Platform from the Liftgate

Purpose: To stow a disabled liftgate for transport to a maintenance facility.

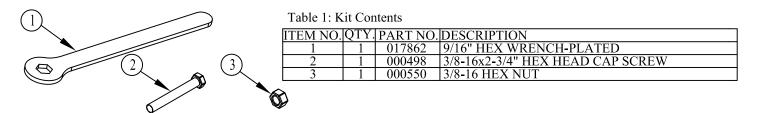


Figure 1: Kit contents.

#### **Preparing the Liftgate**

- 1. Verify you have all necessary parts of the kit. (Figure 1, Table 1)
- **2. Lower** the liftgate to the ground, or place supports beneath it to prevent it from shifting.
- **3. Manually Trip** the Tommy Gate circuit breaker, located near the battery on the red cable, to disconnect the power. (Figure 2)

#### Removing the Platform from the Liftgate

**Caution:** The driver's side arm is spring loaded and will swing away from the vehicle when freed. **Stand clear** of its path or **prevent** it from moving.

- **1. Remove** the four hex head bolts from each of the pivot pins. (Figure 3)
- 2. Thread the nut onto the end of the bolt to protect the threads. (Figure 4)
- **3. Position** the nut and bolt inline with one of the pivot pins.
- **4. Tap** the bolt with a hammer to remove the pivot pin. Do not push on the pin with your thumb or fingers.
- **5. Repeat** steps 3 and 4 to remove each of the top two joints on both arms as marked in Figure 3.
- **6. Manually Fold** the arms and cylinders up and **restrain** them so that the van doors can be closed.
- 7. Store the platform in the van.
- **8.** Have your liftgate serviced by a Tommy Gate distributor.

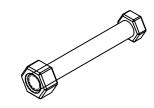


Figure 4: Nut and bolt assembly.

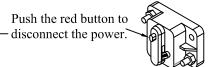


Figure 2: Circuit breaker.

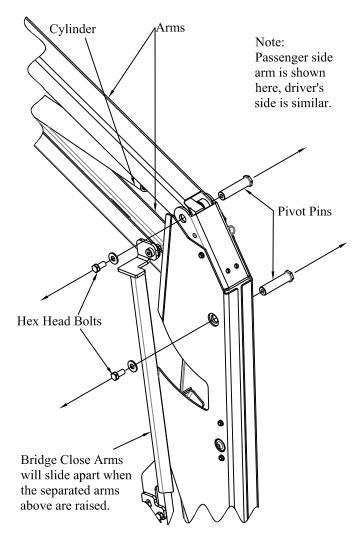


Figure 3: Removing the pivot pins.



## V2 Technical Troubleshooting Instructions

DPN: 095258



DPN: 095258

# Troubleshooting Instructions V2 Technical

DPN: 095258